データ転送ケーブル DTC-2-DS 接続方法・通信仕様マニュアル

データ転送ケーブル DTC-2-DS 接続方法・通信仕様マニュアル

この度はデータ転送ケーブルをお買い上げ頂きありがとうございます。 ご使用前に、本書をよくお読み頂き正しくお使いくださいますようお願い申し上げます。

■付属のねじを使用した測定器への取り付け

測定器取付用のねじ(M2×4mm・・・2 個)が 付属しています。 右図を参考に、データ転送ケーブルを測定 器へ取り付けてください。

※測定器の電池蓋にねじがついている機種の場合は、そちらのねじを使用しても問題ありません。



■配線の接続方法

●PC と直接接続する場合

デバイスドライバのインストールは不要です。

●市販されている USB-RS232C 変換ケーブルを使用する場合

変換ケーブルの説明書に従いデバイスドライバの設定をしてください。

			表:ピン	配置と配線	
4. V+ (白) 2. Ryd (黄)	ピン 番号	記号	線の色	信号名	備考
2. Kkd (夏)	1	未使用			
7. V- (茶) 5. Gnd (シールド)	2	Rxd	黄	データ 受信	データを装置から 受信する。
ケーブル側	3	Txd	緑	コマンド 送信	装置ヘコマンドを 送信する。 ※通信コマンド 一覧参照(P3)
	4	V+(DTR)	白	正電源	+5~15V
台から1~5	5	Gnd	シールド	グランド	0V
	6	未使用			
6000 右から6~9	7	V-(RTS)	茶	負電源	-5~15V
	8	未使用			
PC 側	9	未使用			

- 1 -

データ転送ケーブル DTC-2-DS 接続方法・通信仕様マニュアル

■データ転送ケーブル DTC-2-DS 通信仕様

●通信コマンドー覧

デジタル S ラインインジケータ DE1-233 シリーズには対応しておりません。 測定値を取得したい場合は任意の文字を送信すれば取得できます。

コマンド	意味	DET-234S*	DET-***SW	DEI-WKS*
AOFF?	オートオフ状態取得	0		
AOFF 0	オートオフ切り替え オートオフなし	0		
AOFF 1	オートオフ切り替え オートオフあり 2 時間	0		
ANA ON/OFF	アナログディスプレイ設定		0	
BT1/BT0	Bluetooth の ON/OFF		0	
BTRST	Bluetooth のペアリング情報削除		0	
CHA ?	現在の符号の状態取得	0	0	0
CHA+ / CHA-	符号切り替え	0	0	0
CLE	MIN,MAX,Delta の測定値クリア	0	0	0
FAC RST	工場出荷状態リセット	0	0	0
FACT ?	アナログメモリの現在表示状態取得	0	0	
FACT 1,2,5,10	アナログメモリの表示変更	O %1	O %2	
FCT?	現在のお気に入り設定取得		0	0
FCT0···9···A···F	お気に入り設定		O %3	O %4
KEY?	ボタン操作のロック状態取得		0	0
KEY0/KEY1	ボタン操作ロック/ロック解除		0	0
MAC?	Bluetooth の MAC アドレス取得		0	
MIN/MAX/DEL/NOR	測定モード変更	0	0	0
MOD?	現在の測定モード取得	0	0	0
MUL?	係数設定取得		0	0
MUL±XXX.YYYY	係数設定		0	0
ON / OFF	測定器の電源 ON/OFF	0	0	0
OUT 0	連続出力無効	0	0	0
OUT 1	連続出力有効	0	0	0
PRE	プリセット値の呼び出し	0	0	0
PRE ON/OFF	プリセット値の ON/OFF		0	0
PRE 2	設定されているプリセット値取得	0	0	0
PRE +XX YYYYY	プリセット値設定	0	0	0
P or PBI or ?	測定値の取得	0	0	0
REF2	現在の REF モード取得	0	0	0
REF1/REF2	REF1 と 2 切り替え			0
RES 2	相互の分解能比能取得	0	0	0
RES1	公留能亦再(0,0001mm)	0	0	0 **5
RES2	分解能変更(0.000mm) 分解能変更(0.001mm)	0	0	
RES3	<u>分解能変更(0.001mm)</u> 分解能変更(0.01mm)	0	0	0 **6
PST	フーザーパラメータリセット	0	0	
SBY?	オートディスプレイオフ設定時間(分)取得	<u> </u>	0	0
SBY yy	オートディスプレイオフ時間(分)設定		0	0
SET	ガードアイスノレイオン時間(カノ設定		0	0
SET?	機器の現在の設定値取得	0	0	0
STO?	測定値ホールド状能取得	0	0	0
ST01/ST00			0	0
TOI ?	公差設定の設定値取得		0	0
				0
				0
±YYY.YYYY	▲ 年 四 年 唱 回 年 (+-いずれかの符号設定必須)			0
			0 + 7 - 7	1
※1:FAUIU 个 9 ※4:ECT00AB 主で		FG10***9***A、 DEI_WKS2のなう	しまじり す	

SX ПидаГа Геікі

データ転送ケーブル DTC-2-DS 接続方法・通信仕様マニュアル

■SK-LOG を使用する場合

●対応 0S:Windows 7・8・10・11

①ケーブルをパソコンなどの D-Sub9 ピンに接続します。

※接続をするときはリアルタイムモードを OFF にしてから接続してください。

測定値が表示される前にリアルタイムモードを ON にすると測定値が取得できません。

※ケーブルを PC に接続しただけでは測定器に電気が供給されません。

②D-Sub9 ピンに直接接続する場合は、測定器設定でDTC-2-DSと接続する測定器を選択し、 Com 選択方式を手動に変更します。

	測定機種	COM番号	COM選択方式	表示桁数	記録方法	171
1 DET-234シリーズ	DET-234シリーズ	COM1	自動	0.001	CSV	
			自動	1		
			手動			
				V		

③手動を選択したら、COM 番号で COM1 を選択して、右下の「OK」ボタンを押します。 ※SK-LOG の接続ボタンを押した後に測定器の電源が入ります。

			<u> </u>			_
	測定機種	COM番号	COM選択方式	表示析数	記録方法	Ï
DET-234シリーズ	DET-234シリーズ	-	手動	0.001	CSV	
		COM1 COM2				

■仕様

●ケーブル長:約3m ●コネクタ形状:D-Sub9ピン

●セット内容:データ転送ケーブル、専用ソフト(SK-LOG Lite版)

●接続可能機種一覧

商品⊐ード	品名·品番
151724	デジタル S ラインインジケータ
151725	DEI-233*
151726	デジタル ミラインインジケータ
151727	
151716	DEI-WKS*
151728	デジタル S ラインテストインジケータ
151729	DET-234S*
151746	デジタル S ラインテストインジケータ
151747	DET-***SW

SK-LOG Lite版 サポートページ ソフトウェアのサポート情報・最新バー ジョンへの更新はこちら ۵Q



- 2 -

データ転送ケーブル DTC-2-DS 接続方法・通信仕様マニュアル

●シリアル通信仕様 ボーレート 4900bpc

ΓιιςαΓα θεικι

●電源起動設定 RTS (

DTR

μ_Ω_μ	4000bps
パリティ	偶数
データビット	7 ビット
ストップビット	2 ビット
フロー制御	なし

●エラーメッセージ _{エラー}

エラー メッセージ	意味
ERR0	読み取りエラー
ERR1	パリティエラー
ERR2	コマンドエラー
ERR3	測定能力をオーバーしている
ERR8	メモリエラー
ERR9	重大なエラー、機器を修理する必要があります

●MAX 値を取得する手順

OFF

ON

1. MAXの文字列を送信し、測定モードを変更

2. P or PRI or ? のいずれかの文字列を送信し、測定値を取得

3. 手順 2. を繰り返すと、常にその時の MAX 値を取得

●NOR 値を取得する手順

- 1. NORの文字列を送信し、測定モードを変更
- (測定モード初期値から変更していない場合は不要) 2. P or PRI or ? のいずれかの文字列を送信し、測定値を取得
 - Por PRI or ? のい 9 れかの文子列を送信し、測定値を助
- 3. 手順 2. を繰り返すと、常にその時の NOR 値を取得

<u>●データフォーマッ</u>	<u>ット</u>
[符号 E1-En ″.	" F1-Fn CR]

符号	: +, -
E1-En	:整数
F1-Fn	:小数
n	:単位、分解能に依存
CR	: 改行コード(キャリッジリターン)

<u>●データ送信</u>

[コマンド CR]
コマンド	:Por PRI or ?
	対応は測定器の種類に依存
CR	: 改行コード(キャリッジリターン)

■お問い合わせの際は

- ●正常に作動しない場合や、不明な点がございましたらお買い上げの 販売店または、当社までご連絡ください。
- ●お問い合わせやご連絡が無いまま、直接修理品などを送付されても 処理、対応ができない場合がありますのでご了承ください。

🕄 新潟精模株式会社

〒955-0055 新潟県三条市塚野目5丁目3番14号 ☎(0256)33-5502(代) FAX(0256)33-5528 URL https://www.niigataseiki.co.jp 2404 I450-K1 DATA TRANSFER CABLE DTC-2-DS CONNECTION COMMUNICATION SPECIFICATION MANUAL

DATA TRANSFER CABLE DTC-2-DS CONNECTION - COMMUNICATION SPECIFICATION MANUAL

Thank you for purchasing the DATA TRANSFER CABLE DTC-2-DS.

For proper operation, please read this manual thoroughly and follow the procedures described.

CONNECTING TO THE MEASURING INSTRUMENT

Mounting Screws (M2 \times 4mm \cdot \cdot \cdot 2x) are included. For mounting Data Transfer Cable to the

instrument, refer to the diagram to the right for proper orientation.

% If available, the cover screws that came with the instrument can be used.

Screws provided with cable, or the existing cover screws. ⅔ Make sure the raised part is toward the instrument back

WIRING SPECIFICATION

For direct connection to PC

Device driver installation is not required.

• When using a commercially available USB-RS232C adapter cable Please set up the device driver according to the adapter manual.



-1-

δί ΠιιααΓα Seiki

DATA TRANSFER CABLE DTC-2-DS CONNECTION COMMUNICATION SPECIFICATION MANUAL

■ DATA TRANSFER CABLE DTC-2-DS COMMUNICATION SPECIFICATIONS

Command List

DEI-233 series Digital S-line indicator is not supported. Sand any abaranta ed value.

Send	any	character	tο	instrument	tο	receive	measure

Command	Command Description		DET-***SW	DEI-WKS*
AOFF?	AUTO OFF Setting Request	0		
AOFF 0	AUTO OFF Disabled	0	0	
AOFF 1	AUTO OFF Enabled , set to 2 hr.	0		
ANA ON/OFF	Analog Display ON/OFF		0	
BT1/BT0	Bluetooth ON/OFF		0	
BTRST	Reset Bluetooth Pairing Information		0	
CHA ?	Current Sign Setting Request	0	0	0
CHA+ / CHA-	Change Sign	0	0	0
CLE	Clear Values for MIN, MAX, Delta	0	0	0
FAC RST	Factory Reset	0	0	0
FACT ?	Analog Memory Display Status Request	0	0	
FACT 1, 2, 5, 10	Set Analog Memory Display	O %1	O %2	
FCT?	Current Favorite Setting Request		0	0
FCT0···9···A···F	Set Favorite		O %3	O %4
KEY?	Button Lock Status Request		0	0
KEY0/KEY1	Button Lock ON/OFF		0	0
MAC?	Bluetooth MAC Address Request		0	
MIN/MAX/DEL/NOR	Set Measurement Mode	0	0	0
MOD?	Measurement MODE Request	0	0	0
MUL?	Multiplier Setting Request		0	0
MUL±XXX.YYYY	Multiplier Setting		0	0
ON / OFF	Measuring Instrument Power ON/OFF	0	0	0
OUT 0	Continuous Output ON	0	0	0
OUT 1	Continuous Output OFF	0	0	0
PRE	Set to Preset Value	0	0	0
PRE ON/OFF	Preset Value ON/OFF		0	0
PRE ?	Preset Value Request	0	0	0
PRE ±XX.YYYYY	Set Preset Value	0	0	0
P or PRI or ?	Measured Value Request	0	0	0
REF?	Current REF Mode Request			0
REF1/REF2	Switch Between REF1and 2			0
RES ?	Resolution Setting Request	0	0	0
RES1	Set Resolution (0.0001mm)			O %5
RES2	Set Resolution (0.001mm)	0	0	0
RES3	Set Resolution (0.01mm)	0	0	O %6
RST	Reset User Parameters	0	0	0
SBY?	Auto Off Time Setting Request (min.)		0	0
SBY xx	Set Auto Off Time (min.)		0	0
SET	Set Zero Point		0	0
SET?	Current Set Value Request	0	0	0
STO?	Measurement Hold Status Request		0	0
ST01/ST00	Measurement Hold ON/OFF		0	0
TOL?	Tolerance Value Setting Request			0
TOL1/TOL0	Tolerance Mode ON/OFF			0
TOL \pm XXX.XXXX	Set Tolerance Value			0
\pm YYY.YYYY	(+/-sign required)			Ŭ
※1 : Excluding: FACT10	2: Excluding: FACT2	%3∶For: FC	CT09A、C	
%4:For: FCT0····9···A···B	※5: Only for model: DEI-WKS-N	%6∶Only fo	r model: DEI-WKS	2

DATA TRANSFER CABLE DTC-2-DS CONNECTION COMMUNICATION SPECIFICATION MANUAL

■ For use with SK-LOG

• Supported OS : Windows 7 • 8 • 10 • 11

(1) Connect cable to the computer D-Sub9 serial port.

* Make sure Real Time Mode is OFF before connecting.

If Real Time Mode is on before a measurement is displayed, the measured value can not be received. % Cable does not supply power to the Instrument from the PC.

2 When connecting directly to computer D-Sub9 serial port, select the measuring instrument in the Device Settings and set the COM Select Method to "Manual."

#	Model	COM Num	COM Select Method	Digits	Record Form	Gr
1 DET-234 series	DET-234 series	COM0	Manual	0.001	CSV	
			Auto	i.		
			Manual			

③ After selecting "Manual," select COM1 for the Com Num and press the "OK" button on the lower right. % After pressing the connection button on SK-LOG, the Measuring Instrument power will be turned ON.

_	Model	COM Num	COM Select Method	Digits	Record Form	Gr
1 DET-234 series	DET-234 series		Manual	0.001	csv	
		COM15				

SPECIFICATION

- Cable Length:~ 3m • Connector Type : D-Sub9Pin
- Contents : Data Transfer Cable, Software (SK-LOG Lite)

• Compatible Instruments

Part No.	Product Name • Number
151724	S-LINE DIGITAL INDICATOR
151725	DEI-233*
151726	A LINE DIOITAL INDIAATOD
151727	S-LINE DIGITAL INDICATOR
151716	DEI-WKS*
151728	S-LINE DIGITAL TEST INDICATOR
151729	DET-234S*
151746	S-LINE DIGITAL TEST INDICATOR
151747	DET-***SW

SK-LOG Lite Support Page Go to this address for latest version of software and for software support



software_sklog.html



- 2 -

DATA TRANSFER CABLE DTC-2-DS CONNECTION COMMUNICATION SPECIFICATION MANUAL

Serial Com Spec. D 1 D 1 4000

Daud Rate	4800bps
Parity	even
Data bits	7
Stop bits	2
Flow Control	No

Error Messages

Message	Error
ERR0	Read Error
ERR1	Parity Error
ERR2	Command Error
ERR3	Measurement Over Limit
ERR8	Memory Error
ERR9	Serious Error, Equipment repair is required.

Initial Settings

RTS

DTR ON

OFF

Procedure to Receive MAX Value

1. Send [MAX] string to set Measurement Mode.

2. Send [P] or [PRI] or [?] to request Measured Value.

3. Each time Step 2 is repeated, the current MAX Value will be returned.

Procedure to Receive NOR Value

1. Send [NOR] string to set Measurement Mode.

- (This step only required if Measurement Mode has been changed from initial setting.)
- 2. Send [P] or [PRI] or [?] to request Measured Value.
- Each time Step 2 is repeated, the current NOR Value will be returned. 3.

Data Format

[S|E1-En|"."|F1-Fn|CR]

- S : +, -E1-En : integer
- F1-Fn :decimal
- : depends on units and resolution n
- CR : Carriage Return code

Data Send

[command | CR]

command : P or PRI or ?

- response is instrument dependent
- CR : Carriage Return code

QUESTIONS and INQUIRIES

- If there is a problem with the product or if you have any questions, please contact distributor or place of purchase.
- •Please note manufacturer is unable to respond to inquires or provide service directly. Please contact distributor or place of purchase.

Nilgata Selki Co., Ltd. 5-3-14, Tsukanome, Sanjo, Nilgata, Japan, 855-0055 Tal.: +81-266-33-5522 Fax. :+81-256-33-5518 MAIL inti.sales@niigataseiki.co.jp URL http://www.nikataseiki.co.jp