

# DIGITAL PROTRACTOR DP-180 Driver Installation Procedure

Thank you for purchasing the DP-180 DIGITAL PROTRACTOR.

Please read this manual thoroughly for instruction on driver installation and use.


■ PREPARATION ※ Administrator privileges are required to install the driver.

### SK-LOG Lite

- 1 Access the website below.
  - To download SK-LOG Lite version software: http://www.niigataseiki.net/official/english/support/software\_sklog.html
- ② Download the compressed driver file for the DP-180 Digital Protractor [CP210x.zip] from the Silicon Labs website. Unzip the file and save to any location on your computer.
- 3 Connect the DP-180 Digital Protractor to the USB port of the computer.
- 4 Turn the power ON for the DP-180 Digital Protractor.

#### 

- (1) Insert the SK-LOG disk into the CR-ROM drive of the computer.
- 2 Copy the folder [CP210x] from the CD-ROM to any location on the computer.
- 3 Connect the DP-180 Digital Protractor to the USB port of the computer.
- 4 Turn the power ON for the DP-180 Digital Protractor.
- X For this manual, we will assume the files are copied to  $\Gamma$  D:\Driver  $\mathbb I$  folder on the computer.
- ※ Only the files in the 『CP210x』 folder are used for this produce.

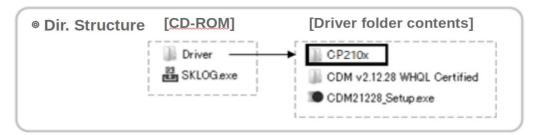

#### ■ DRIVER INSTALLATION PROCEDURE

- 1 Open Device Manager
- If Silicon Labs CP210x USB to UART Bridge I is displayed, the diver is installed.




## SK ∏ııgaFa £eıkı


②Right-click on 『CP2102 USB to UART Bridge Controller』 and select 『Properties』



③Select [Update Driver] from the Properties menu.

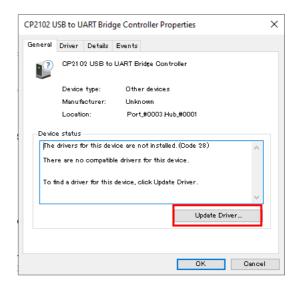


4Select [Browse my computer for drivers]

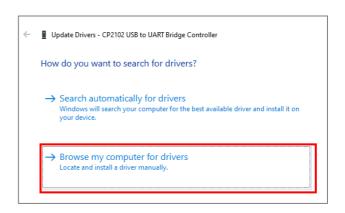

⑤ Click on 『Browse 』 and select the location from Page 1 ■ Preparation where the diver was saved.

In the 『CP210x』 folder, select the folder location below according to the computer OS version.

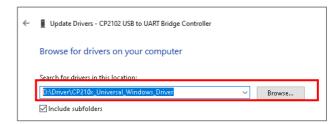

<u>Windows10: CP210x\_Universal\_Windows\_Driver</u> Windows7/8/8.1: CP210x\_Windows\_Drivers

- \* The Example shown is for installation on a Windows10 PC. Details will vary according to the Windows version on your computer.
- \* After installing the driver, remove the CD-ROM from your computer.

H372-K 2205