


精密測定工具 デジタルロングジョウノギス

この度は「デジタルロングジョウノギス」をお買い上げいただきありがとうございます。
この商品は、測定物の外側・内側・段差測定が可能な精密測定工具です。

- 正しく安全にお使いいただくため、ご使用前に本取扱説明書を必ず読み、記載の手順に従ってご使用ください。
お読みになった後は、お使いになる方がいつでも見ることが出来る場所に大切に保管してください。
- 第三者に譲渡・貸与される場合も、この説明書を必ず添付してください。
- 当商品に関するお問い合わせは、お買い求めの販売店もしくは当社にご連絡ください。

■各部の名称と機能

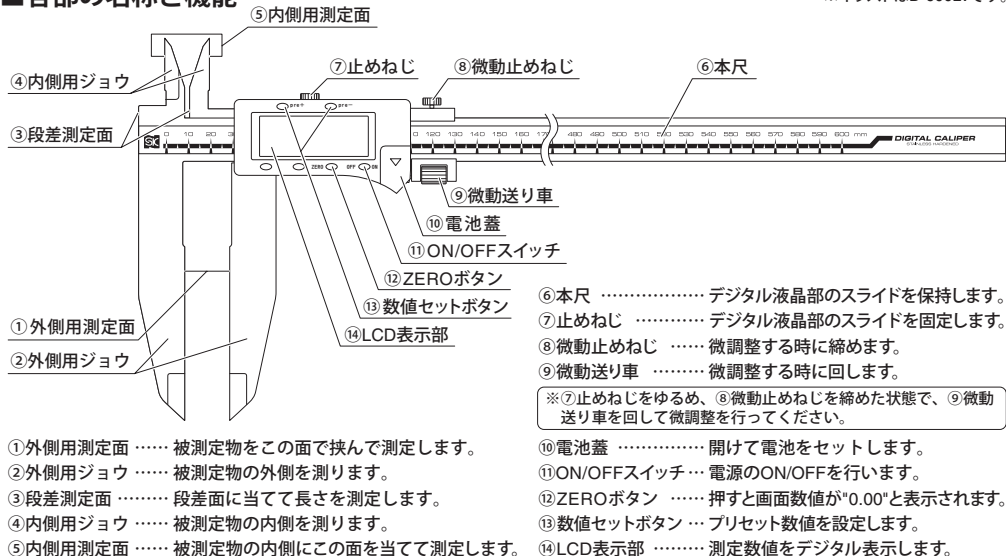

- ①外側用測定面 …… 被測定物をこの面で挟んで測定します。
- ②外側用ジョウ …… 被測定物の外側を測ります。
- ③段差測定面 …… 段差面に当てて長さを測定します。
- ④内側用ジョウ …… 被測定物の内側を測ります。
- ⑤内側用測定面 …… 被測定物の内側にこの面を当てて測定します。
- ⑥本尺 …… デジタル液晶部のスライドを保持します。
- ⑦止めねじ …… デジタル液晶部のスライドを固定します。
- ⑧微動止めねじ …… 微調整する時に締めます。
- ⑨微動送り車 …… 微調整する時に回します。
- ⑩電池蓋 …… 開けて電池をセットします。
- ⑪ON/OFFスイッチ …… 電源のON/OFFを行います。
- ⑫ZEROボタン …… 押すと画面数値が"0.00"と表示されます。
- ⑬数値セットボタン …… プリセット数値を設定します。
- ⑭LCD表示部 …… 測定数値をデジタル表示します。

※⑦止めねじをゆるめ、⑧微動止めねじを締めた状態で、⑨微動送り車を回して微調整を行ってください。

安全上のご注意 必ずお守りください

お使いになる人や他の人への危害、財産への損害を未然に防止するため、必ずお守りいただくことを右記のように説明しています。

- ⊘ してはいけない内容『禁止事項』です。
- ⊙ 必ず実行していただく内容『強制事項』です。

⚠ 注意 お守りいただかないと『傷害を負う、または物的損害が発生するおそれがある内容』です。

- ⊙ 取扱説明書をよく読み、指示に従う。
・取扱説明書に記載された内容以外での使用は、事故の原因となります。
- ⊙ 測定作業にのみ使用する。
・指定用途以外へのご使用は、製品の破損や摩耗、予測できない事故の原因となります。
- ⊙ 大切に取り扱い扱う。
・ぶつける、落とすなどの衝撃を与えたり、重量物を上に載せたりしないでください。精度不良や破損の原因となります。
・商品に傷をつけないでください。
- ⊙ インバータ式蛍光灯などの電界が発生する場所での使用は避ける。
・LCD表示部の数値が誤作動を起こす原因となります。
- ⊙ 下記の条件を満たす環境で使用・保管する。
●雨や水、油などがつかからない、乾燥した場所
●高温にならない場所
●子どもや、使用者以外が近付かない場所
・上記に反する場所での使用は製品の破損、事故やけがの原因となります。
- ⊙ ジョウ先端は尖っているので、扱いに注意する。
・けがの原因となります。
- ⊘ 分解・改造を行わない。
・製品の破損や事故の原因となります。修理はお買い上げの販売店、または当社までご連絡ください。
- ⊘ 電気ペンなどで書き込まない。
・電気ペンなどで本尺やジョウなどに、番号などの書き込みをしないでください。


使用前の準備

ご使用前に、下記の準備を行ってください。

- 測定面、摺動面、外観などの汚れや防錆油などを拭き取る
そのまま測定を行うと誤差の原因となります。
- 本体と被測定物の温度慣らしを十分に行う
測定器本体と被測定物の間に温度差があると、誤差の原因となります。同じ温度になるよう、温度慣らしは十分に行ってください。

電池のセット・交換

- ①電池蓋を矢印の向きに開けます。
- ②電池を、必ず(+)側を表にしてセットしてください。
- ③電池蓋を元通りに装着してください。

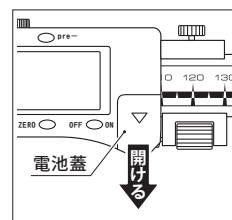

⚠ **ご注意** 電池は必ずリチウム電池CR2032をお使いください。

トラブルと対応

- Q. 画面に何も表示されなかったり、数字が点滅している。
A. 電池の残量が少なくなっている可能性があります。新しい電池と交換してください。
- Q. 電源ONの状態ですらでもLCD表示の数字が変わらない。
A. 一度電池を取り外し、30秒後に電池をセットし直してください。
- Q. スイッチを押しても何も反応しない。
A. 電池が正しくセットされているか確認してください。
- Q. 正しい数値が表示されない。
A. 操作パネルをあまり早くスライドさせると、誤表示の原因となります。ゆっくりとスライドさせてください。
A. 使用環境の湿度が高い可能性があります。本器を乾燥させ、湿度が低い環境下でご使用ください。

製品仕様

※量子化誤差(±1カウント)を含みます

品番	測定範囲 (mm)	最大許容誤差* (mm)	質量 (g)
D-300LV	0-300	±0.05	920
D-600LV	0-600	±0.08	4,300

- 最小読取値：0.01mm
- 表示：LCD 5桁表示
- 電源：リチウム電池 CR2032×1
- 付属品：リチウム電池 CR2032 (テスト用)

※外側の精度保証は、測定面で最も本尺に近い部分(上側)によって保証しています。ジョウの先端を用いて測定を行う場合、測定の方法によっては測定精度が表示の最大許容誤差を満たさない場合があります。

使用方法

■電源のON/OFF

- ①電源をONにするには、「ON/OFF」スイッチを押してください。
- ②電源をOFFにするには、「ON/OFF」スイッチを押してください。

■絶対測定モード

- ①止めねじをゆるめ、電源を入れてください。
- ②ノギスのジョウを閉じた状態で「ZERO」ボタンを押してください。
- ③LCD表示部に"0.00mm"が表示されると計測開始OKです。

■比較測定モード

- ①止めねじをゆるめ、電源を入れてください。
- ②ノギスのジョウが開いた状態(どのポイントでもOK)の時に「ZERO」ボタンを押してください。
- ③LCD表示部に"0.00mm"が表示されると計測開始OKです。

■プリセット機能

任意の数値にセットすることで、セットした数値からの測定を行うことができます。

- ①止めねじをゆるめ、電源を入れてください。
- ②「ZERO」ボタンを押したまま、数値セットボタンを長押しすると、LCD表示部の数値が変わります。

使用後のお手入れ・保管方法

- 測定面・摺動面・外観などの汚れや油などを乾いたウエスで拭き取り、防錆処理を行う
防錆処理は防錆油を薄く塗るか、防錆袋などに入れてください。
- 止めねじをゆるめた状態で保管する
止めねじを締めて固定すると、温度変化による膨張などで無理な力がかかり、精度不良の原因となります。
- 付属のケースに入れ、乾燥した冷暗所に保管する
直射日光や湿気は避け、管理者以外が触れない状態で保管してください。
- 長期間使用しない場合は電池を製品から取り外した状態で保管してください
長期間使用しないで放置すると、電池の液漏れの原因となります。

修理の際は

- 正常に作動しない場合や、不明な点がございましたらお買い上げの販売店または、当社までご連絡ください。
- お問い合わせや、ご連絡が無いまま直接当社に修理品などを送付されても処理、対応ができない場合がありますのでご了承ください。

DIGITAL LONG JAW CALIPERS

Thank you for purchasing Niigata Seiki Digital Long Jaw Calipers.
This is a precision measuring tool for making Inside, Outside, and Step Height measurements.

- For safe and proper use, please read this instruction manual before use and follow the procedures described. Please keep manual where it is accessible to user for future reference.
- Keep this manual with the instrument if transferred or leased to a third party.
- For inquiries about this product, please contact dealer or Niigata Seiki.

■ PART IDENTIFICATION AND FUNCTION ※Model D-600LV shown.

※For Fine Adjustment, Loosen Lock Screw ⑦, and tighten Fine Adjust Lock Screw ⑧. Rotate Fine Adjust Feed Wheel ⑨.

① Measuring Surfaces For Outside Measurements Object to be measured is positioned between these surfaces.
② Outside Jaws For measuring outside dimensions.
③ Measuring Surfaces For Step Measurements Measures height of steps.
④ Inside Jaws For measuring inside dimensions.
⑤ Measuring Surfaces For Inside Measurements Position surfaces inside object to be measured.
⑥ Scale Supports LCD Display Unit.
⑦ Lock Screw Tighten to Prevent the Slide and Display from moving.
⑧ Fine Adjust Lock Screw Tighten to use Fine Adjust Feed Wheel.
⑨ Fine Adjust Feed Rotate wheel for fine adjustment.
⑩ Battery Cover Open to access battery.
⑪ [ON/OFF] Button For turning power ON/OFF.
⑫ [ZERO] Button When pressed, Display will read "0.00".
⑬ Preset Adjust Button Setting preset values.
⑭ LCD Display Displays digital measurement.

SAFETY PRECAUTIONS Please Observe

To prevent harm to yourself or others, and to prevent damage to property, always follow the procedures marked by the following symbols.

- Denotes a prohibition - You MUST NOT do
- Denotes a requirement - You MUST do

WARNING Indicates risk of personal injury or property damage if not followed.

- Read the manual and follow the directions.**
 - Use of product other than as described in this manual may cause accident.
- Use only for measuring.**
 - Use for any purpose other than measuring may damage or wear the instrument. Improper use may also cause accident.
- Handle with Care.**
 - Do not drop or subject instrument to excessive shock. Do not place under heavy objects. Improper handling may cause damage or poor accuracy.
 - Do not scratch instrument, for example by writing ID number.
- Avoid using in high electric fields, such as near fluorescent lights or switching power supplies.**
 - Incorrect value may be displayed on LCD.

- Use and store only in environment meeting the following conditions:**
 - Dry location protected from rain, water, and oils.
 - Location that is not excessively hot.
 - Location protected from use by children and unauthorized people.
 - Use in places contrary to the above may cause damage to the product resulting in accident or injury.
- Jaw Tips Are Sharp—Handle With Care.**
 - Careless handling may cause injury.
- Do not disassemble or modify.**
 - Disassembly may damage product or cause accident. For repair, please contact distributor.
- Do not write on instrument with electric engraver.**
 - Do not engrave instrument body or jaw, such as an ID number with engraver or electric pen.

PREPARATION FOR USE

- Before using the calipers, please follow the steps below:
- **Wipe off rust proofing and dirt from measuring surfaces and slide.**
 - Contamination of surfaces may cause measurement error.
 - **Allow the calipers and object to be measured time to reach the same temperature.**
 - A temperature difference between the object to be measured and the caliper may cause measurement error. Allow enough time for the temperatures to equilibrate.

INSERTING • REPLACING BATTERY

- Slide cover in direction of arrow.
 - Insert battery with (+) side outward.
 - Replace battery cover.
- Notice** Use only type CR2032 lithium battery.

TROUBLESHOOTING

- Q. Nothing is displayed, or the numbers are flashing.**
 - A. The battery may be running low, please replace battery with a new one.
- Q. With power on, the number on the LCD does not change as Display Unit is moved.**
 - A. Please reset by removing battery for about 30sec., and then replacing.
- Q. Nothing happens when buttons are pressed.**
 - A. Make sure battery is properly inserted.
- Q. The correct value is not displayed.**
 - A. If the Slide is moved to quickly, it may cause an incorrect reading. Please do not open or close the Slide too quickly.
 - A. High humidity may cause dampness. Please dry off the instrument and use only in dry location.

PRODUCT SPECIFICATIONS

Model No.	Measuring Range	Maximum permissible error ※	Weight
D-300LV	0 - 300mm	±0.05mm	920g
D-600LV	0 - 600mm	±0.08mm	4,300g

- ※ Not including quantization error (±1 count)
- Resolution : 0.01mm
- Display : 5 Digit LCD
- Power : (1x) CR2032 Lithium Battery
- Accessory : CR2032 Lithium Battery (for test)
- ※ Measurements made on area of Measurement Surface closest to the Main Scale will have the highest accuracy. When taking measurements using the tips of the Jaws, accuracy depends of measurement technique and may not meet the stated accuracy specifications.

HOW TO USE

- **Power ON/OFF**
 - To turn on, press the [ON/OFF] Button.
 - To turn off, press the [ON/OFF] Button.
- **Absolute Measurement Mode**
 - Loosen the lock screw, and turn on power.
 - With jaws closed, press the [ZERO] Button.
 - When "0.00mm" is displayed on LCD, Calipers is ready to start measurement.
- **Comparisons Measure Mode**
 - Loosen the lock screw, and turn on power.
 - With jaws open to desired reference position (any point is OK,) press [ZERO] Button.
 - When "0.00mm" is displayed on LCD, Calipers is ready to start measurement.
- **Preset**

Measurement displayed will be offset by a preset value entered into the Gauge.

 - Loosen the lock screw, and turn on power.
 - Hold down the [ZERO] Button and use the Preset Adjust Buttons to change the displayed value.

AFTER USE CARE • STORAGE

- **After use, wipe off any dirt or oil from measuring surfaces, sliding surfaces, and exterior using a dry cloth and perform rust prevention treatment.**
 - For rust prevention, lightly apply anti-rust oil, or place in rust preventive bag.
- **Store with Lock Screw loosened.**
 - If stored with Lock Screw tight, expansion due to temperature changes may cause excessive force which will cause inaccuracy.
- **Store in a cool, dry, and dark location in the provided case.**
 - Keep out of direct sunlight and moisture, and please keep secure from unauthorized personnel.
- **Remove battery if Caliper will not be used for a long period of time.**
 - Batteries may leak if left in unused instrument for an extended period.

SERVICE

- If Instrument is not working properly, or if you have any questions, please contact distributor.
- Please note, manufacturer is unable to respond to inquires or provide service directly. Please contact distributor.